


Step 1

MOUNTING HARDWARE INSTALLATION INSTRUCTIONS

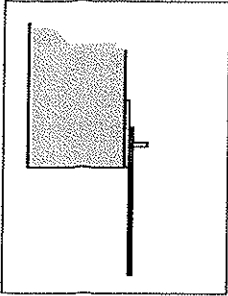


WALL MOUNT

Flat Steel Header

1. Center header over opening and mark horizontal position.
2. Adjust height of header so as to allow "Clearflex" strips to be 1/4" off the floor, and mark vertical position.
3. Drill mounting holes in header and install using appropriate fasteners according to type of surface (fasteners not supplied by Soper's).

Aluminum Angle Universal Header

1. At pre-drilled mounting holes, fasten wall mounting brackets to aluminum angle header using 1" x 5/16" hex bolts and nuts.
2. Place ribbed-neck bolts in holes (@ 2" c/c) in angle (bolts will be pulled into position when strips are fastened).
3. Center header over opening and mark horizontal position.
4. Adjust height of header so as to allow "Clearflex" strips to be 1/4" off the floor, and mark vertical position.
5. Install header using appropriate fasteners according to type of surface (fasteners not supplied by Soper's).

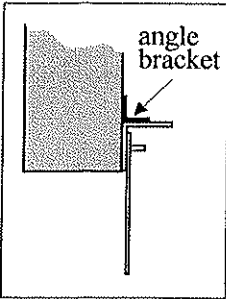


LINTEL/CEILING MOUNT

Steel Angle Header


1. Position header in opening (or under ceiling) to assure that length is correct.
2. Drill mounting holes in top flange of header and install using appropriate fasteners according to type of surface (fasteners not supplied by Soper's).

Aluminum Angle Universal Header

1. Place ribbed-neck bolts in holes (@ 2" c/c) in angle.
2. Position header in opening (or under ceiling) to assure that length is correct.
3. Install header using appropriate fasteners according to type of surface (fasteners not supplied by Soper's).

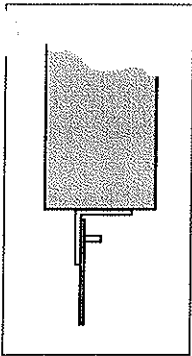

PROJECTION MOUNT

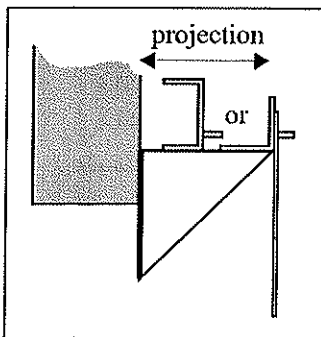

1. Using appropriate fasteners according to type of surface, install projection brackets as follows:
 - Distance from outside edge of first bracket to outside edge of second bracket should equal length of the mounting hardware (studded steel angle or studded steel channel).
 - Height of projection brackets should be such that the "Clearflex" strips, when hung, will be 1/4" off the floor. Keep in mind that the mounting header (studded steel angle or studded steel channel) will be mounted on top of the projection brackets, with the mounting studs being approximately 1" above the top of the bracket.
2. Fasten the mounting hardware (studded steel angle or studded steel channel) on top of the projection brackets by welding or bolting in place. The studs should be on the bottom half of the mounting header and pointing away from the wall.

- See other side for PVC Strip Installation Instructions -

Step 2

"ClearFlex" PVC STRIP INSTALLATION INSTRUCTIONS

1. If the strips are cold, as a result of unheated shipping or storage in cold weather, they should be unrolled and laid flat in a warm place for several hours prior to installation. This will take any excess curl out of the strips, allowing them to hang straight.
2. Hang the back row of strips so that they are concave when viewed from the front. The first strip should be flush with the end of the mounting bar. The remaining strips in the back row are hung side by side, leaving a gap as specified in the chart below (Figure 2). The gap between the strips will depend upon the style of curtain that you have ordered. *Note:* If red or orange warning strips are used, they should be hung in such a position as to warn of a hazard, e.g. edge of opening, intermediate post, etc.
3. After hanging the back row of strips, hang the front row of strips in a convex fashion, so that they interlock with the strips in the back row (Figure 1). Each strip in the front row should be centered over a gap between the strips in the back row.
4. Install the fender washers and nuts on every stud to hold the strips in place.
5. If the PVC strips are too long, trim them with a razor knife so that they are ¼" to ½" off the floor.

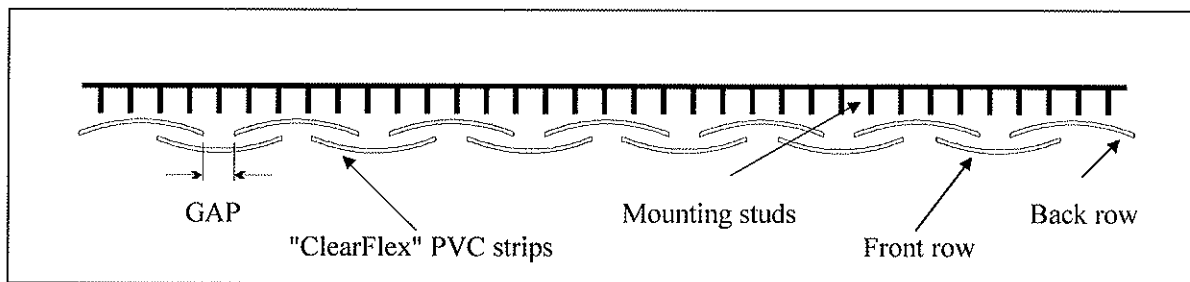


Figure 1

STYLE	4S2 4L2	6S2 6L2	8S2 8L2 8W2	8S4 8L4 8W4	12S2 12L2	12S4 12L4	12S6 12L6	16S2 16L2	16S4 16L4	16S6 16L6	16S8 16L8
Gap between strips in back row	0"	2"	4"	0"	8"	4"	0"	12"	8"	4"	0"

Figure 2

- See other side for Mounting Hardware Installation Instructions -

Note: If you encounter any problems with the installation, please do not hesitate to call our customer service desk @ 1-800-263-8334.